

Installing Printer Paper

16P,44,55P,555



Tear the paper into the shape of an arrow head. Use a pair of scissors or simply tear the printer paper until it looks like the picture above.



Feed the tip of the paper into the paper feed slot. It will slide in easily.



Stop pushing the paper into the printer when the tip of the paper appears at the exit.



Grasp the tip of the paper and gently pull it through the printer until the paper is completely loaded. Tear off the excess paper.



Install the roll of printer paper by pressing the buttons on the left and right of the paper well while sliding the paper roll down. When you feel the axles click into the paper roll, close the printer cover.

Caution

Do not pull the paper backwards out of the printer. You will damage the drive mechanism.

If you experience a paper jam, remove and reload the paper. Reloading the paper may remove what is blocking the paper path.

Do not use screwdrivers, pliers, or any other tools to pry at the printing mechanism. You will break the printer.